




QUICK START GUIDE



6.3 Colostrum bank available


1 Start of calving

2 ColostrumAT is ready on Stand-by

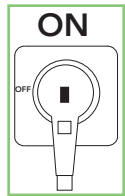


3 Calf is born

4 Put ColostrumBAG in the ColostrumAT and use Profile 3 to thaw colostrum

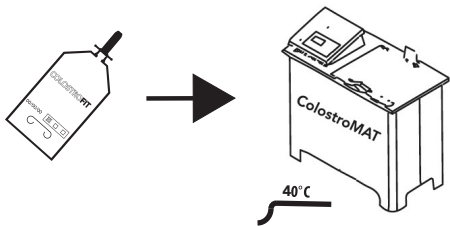

Calf

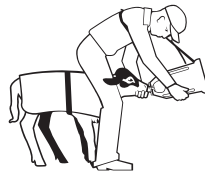


Feed calf as soon as possible (within 4 hours) with ColostrumBAG



Dispose ColostrumBAG




Cow

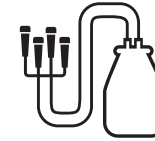


Milk cow as soon as possible



Check the colostrum quality (Colostrometer in the green range; Refractometer >22 Brix%)

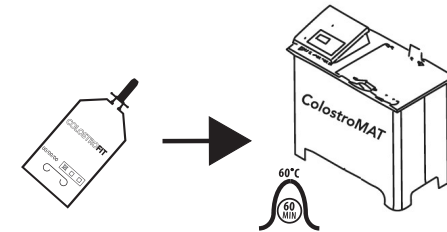

Fill colostrum in ColostrumBAG and pasteurize with Profile 2

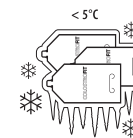

Freeze and store pasteurized colostrum